


Apply Spectrem 1 at corners of intersection

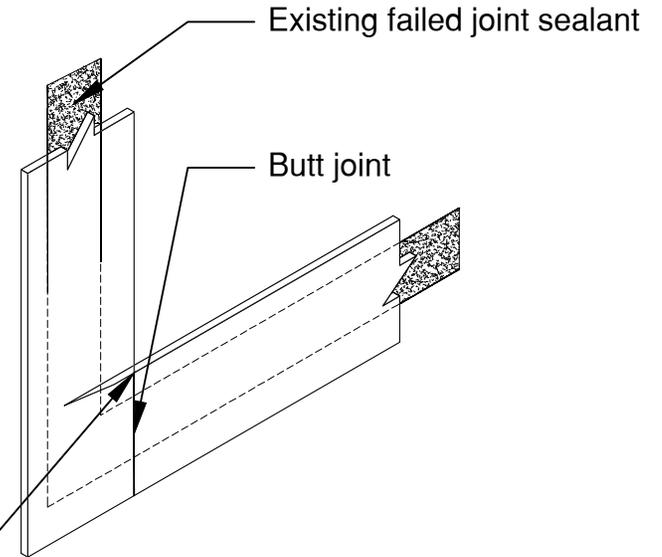

### Overlap Corner Detail

1. Apply Spectrem 1 across the end of overlapping extrusion
2. Place Spectrem Simple Seal over the top of the existing extrusion and firmly press into place to ensure complete contact
3. Tool excess Spectrem 1

### Overlap Corner Detail

1. Butter the butt ends of the extrusion with Spectrem 1
2. Install Spectrem Simple Seal while ensure the ends butt together tightly
3. Tool the Spectrem 1 of flush with the surface



www.tremco.com.au  
12/4 Southridge St, Eastern Creek, NSW 2766  
Phone: (02) 9638 2755 Fax: (02) 9638 2955

Project: Simple Seal

Detail: Corner Detail Joint

Sheet Number:

File Name:

SS - Corner Detail Joint

Rev #:

01

This detail is intended for conceptual purposes only.

Drawn by: SP

Checked by: XX

Scale: N.T.S

Date: 05/11/2020