


### Overlap joint continuation

1. Apply Spectrem 1 across the end of overlapping extrusions
2. Place the Spectrem Simple Seal over the top of the existing extrusion and firmly press into place to ensure complete contact
3. Tool excess Spectrem 1

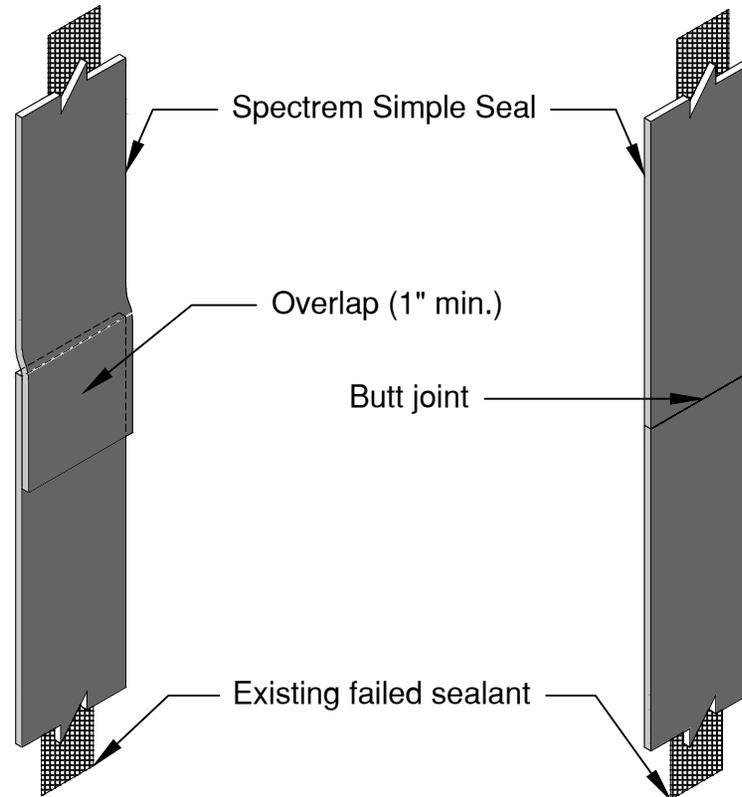

### Butt joint continuation

1. Use Spectrem 1 to butter the butt ends of the Spectrem Simple Seal
2. Install the Spectrem Simple Seal, ensuring the ends butt tightly together
3. Tool the Spectrem 1 of the butt joint flush with the surface



www.tremco.com.au  
12/4 Southridge St, Eastern Creek, NSW 2766  
Phone: (02) 9638 2755 Fax: (02) 9638 2955

Project: Simple Seal

Detail: Joint Continuation Detail

This detail is intended for conceptual purposes only.

Drawn by: SP

Checked by: XX

Scale: N.T.S

Sheet Number:

Date: 05/11/2020

File Name:

SS - Joint Continuation Detail

Rev #:

01