


Shoring wall, ensure that it is smooth, sound and free from any significant voids or protrusions. Crotches between piles to be appropriately filled to allow membrane to be applied to an even substrate

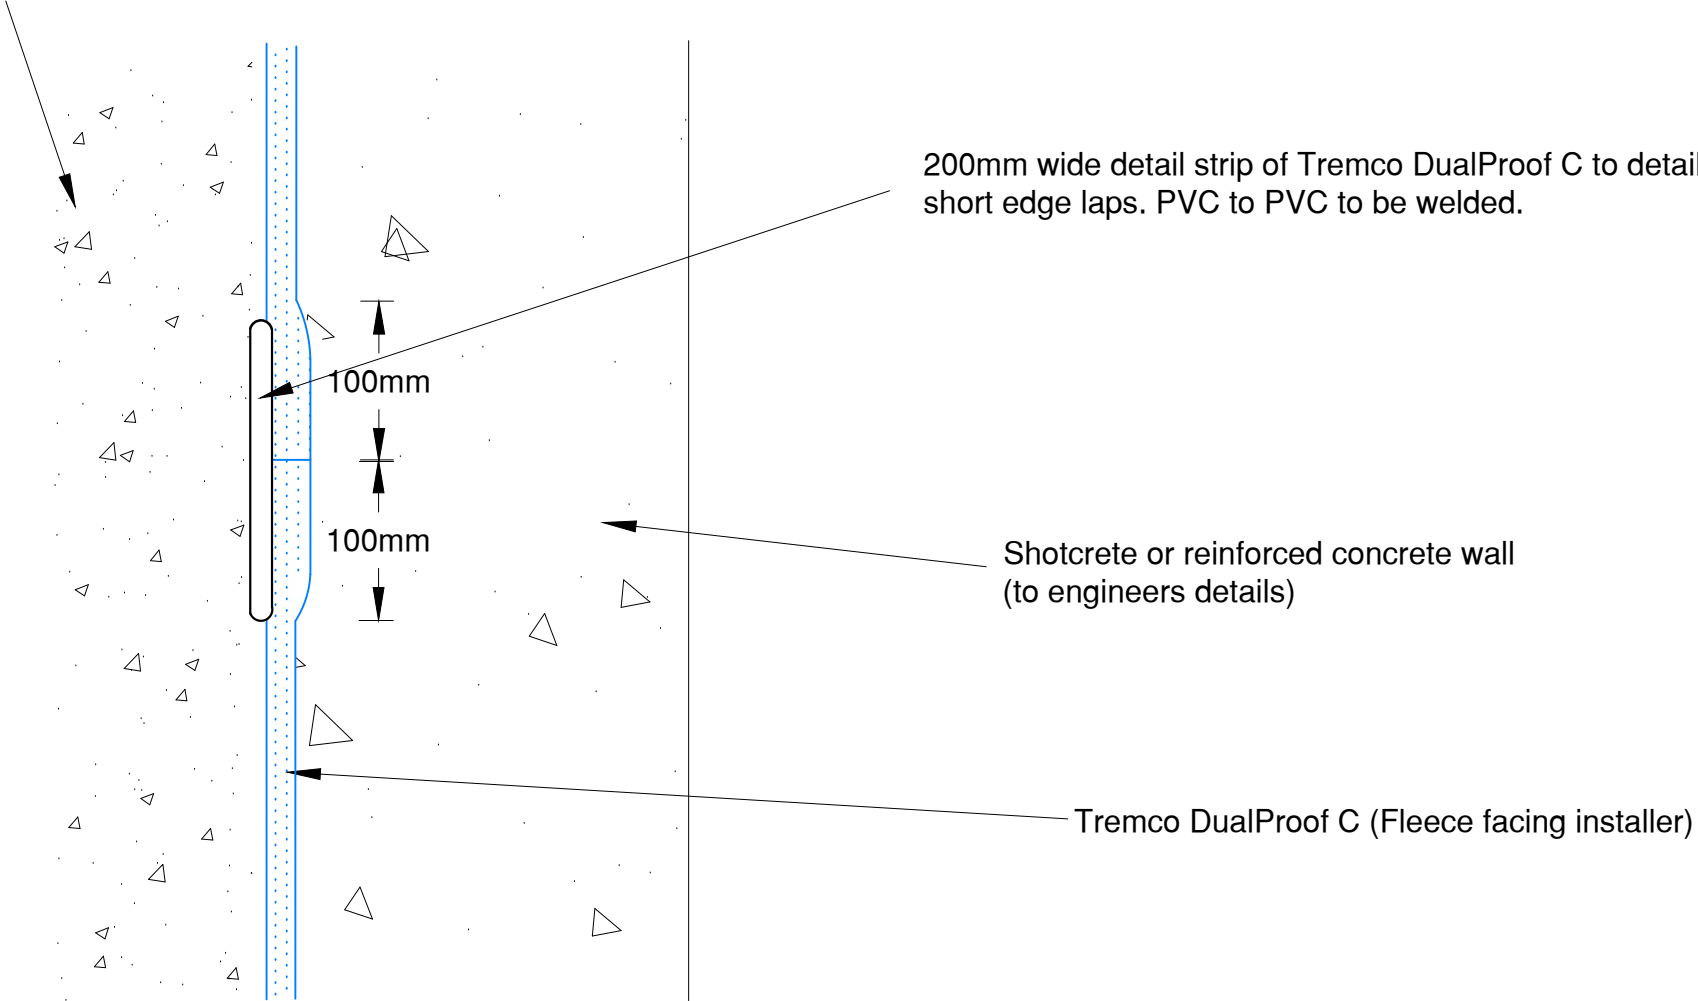

Note: Ensure that short edge laps are staggered by at least 300mm. Penetrations through short edge laps are not acceptable.