




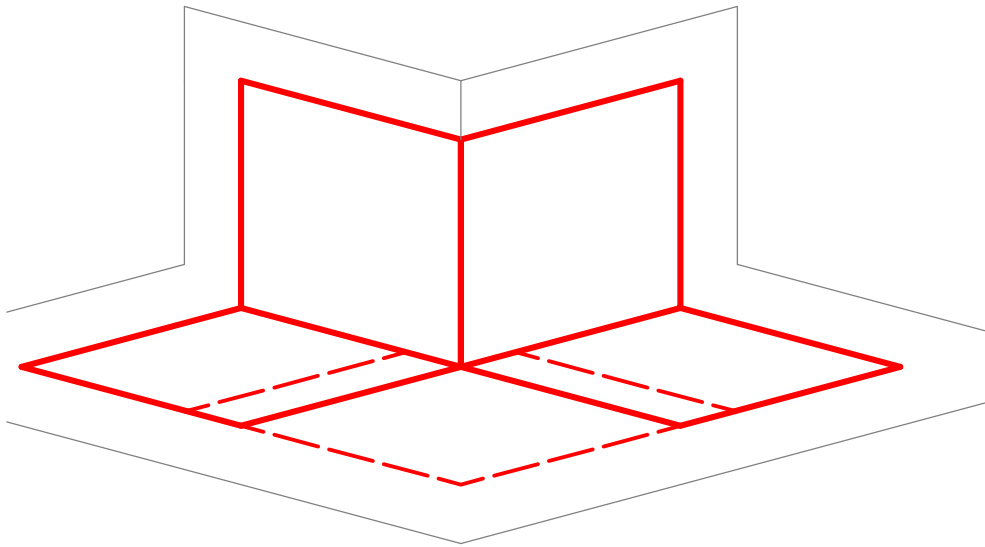


1

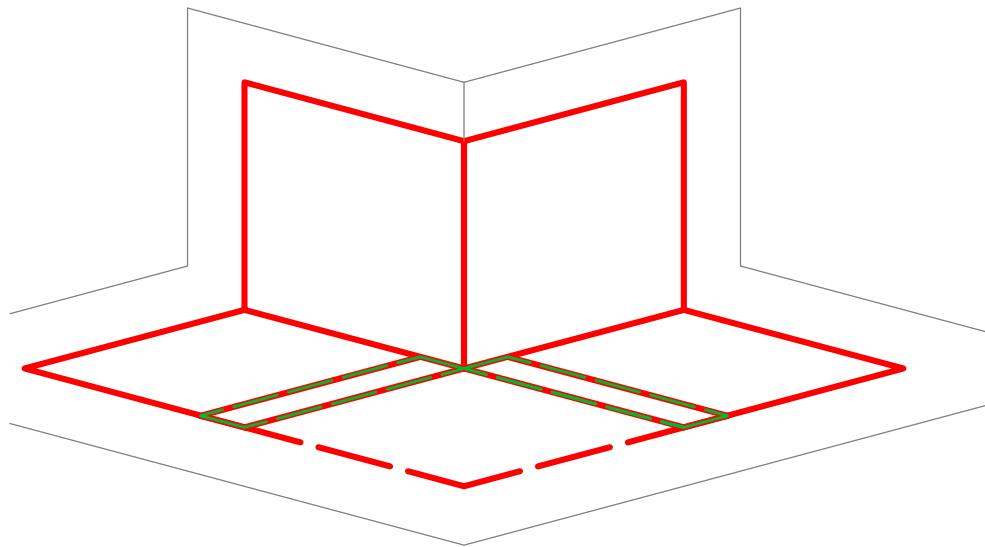


2

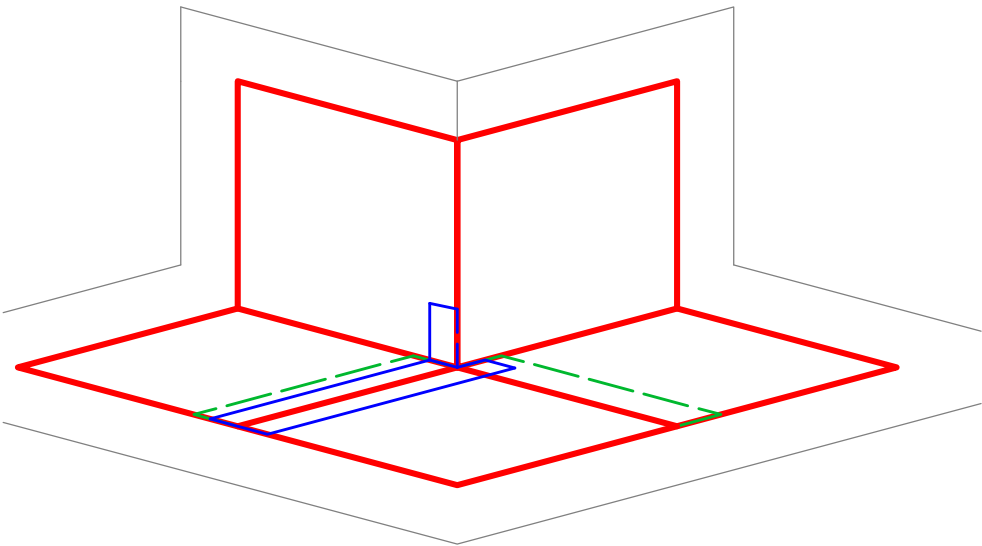

3

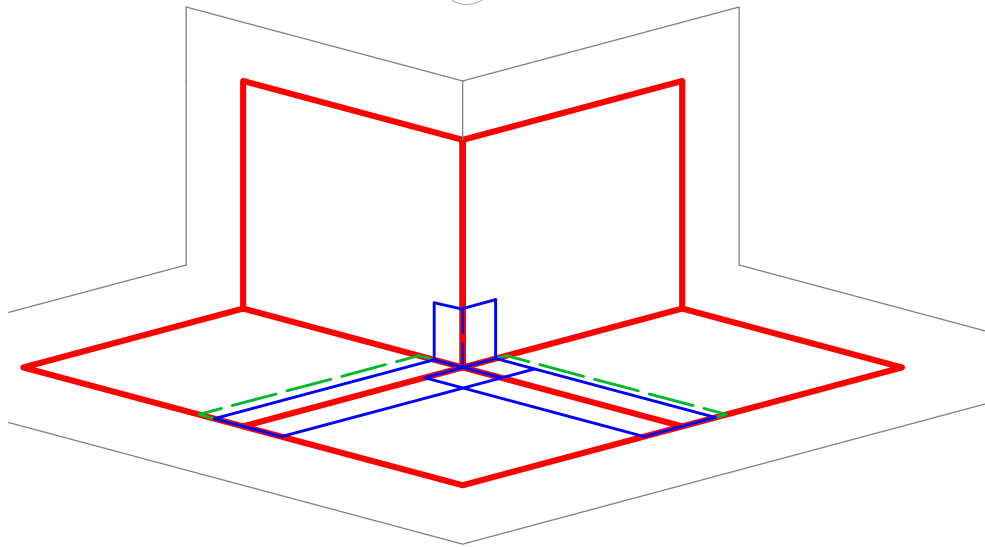

4

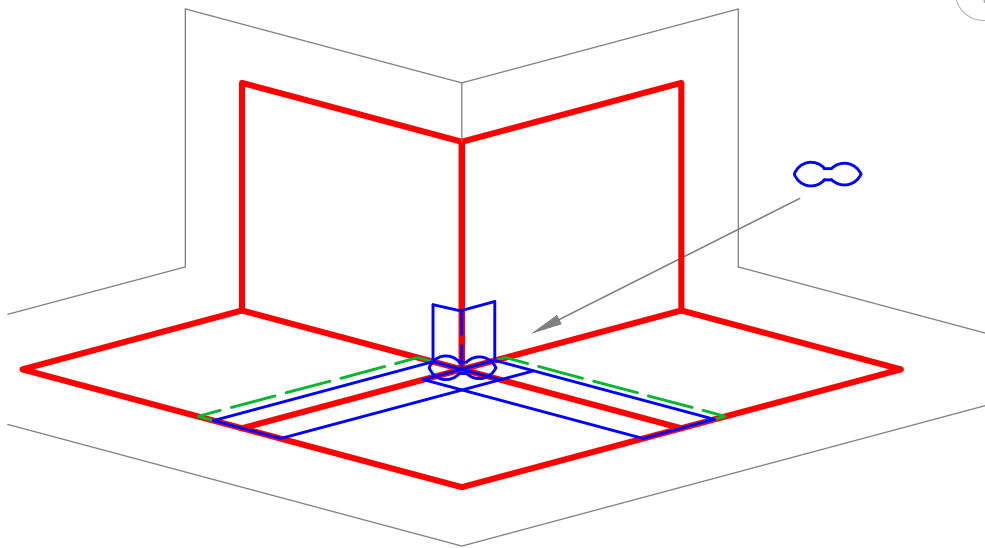

5

TITLE:
TREMproof FBM Plus: Detailing - External Corner

NOTE:

- Illustrative Purposes Only
- Not to Scale

Drawn By:	SP
Checked By:	CB
Revision No.:	0
Date:	11/09/2026

POS	DESCRIPTION	INDEX
1	TREMproof FBM Plus DS Tape	
2	TREMproof FBM Plus Cover Tape	
3	TREMproof FBM Plus	

STEP 1 – PREPARE AND POSITION CORNER CUT-OUT
Cut TREMproof FBM Plus to suit the actual corner, including an additional 80 mm square section for the DS Tape connection. Tuck the FBM Plus cut-out beneath the main membrane, maintaining a minimum 80 mm overlap.

STEP 2 – INSTALL DS TAPE
Apply TREMproof FBM Plus DS Tape within the 80 mm overlap and firmly bond the membrane layers together with a roller.

STEP 3 and 4 – INSTALL COVER TAPE
Apply TREMproof FBM Plus Cover Tape over the joint, maintaining a minimum 60 mm overlap on each side of the joint using a roller.

STEP 5 – COMPLETE CORNER DETAIL
Cut the Cover Tape to the indicated “figure 8” shape and apply centrally over the corner to complete the detail.



This drawing provides general technical guidance based on Tremco CPG Australia’s knowledge and experience at the date of issue. Products must be selected and installed in accordance with current Tremco documentation, applicable Australian Standards, the NCC and project-specific requirements. Final design, detailing and suitability remain the responsibility of the relevant project professionals and contractor. Tremco reserves the right to update this information without notice. Supply is subject to Tremco’s applicable terms, conditions, warranties and exclusions.

Tremco CPG Australia Pty Ltd
12/4 Southridge Street, Eastern Creek, NSW 2766
www.tremco.com.au