


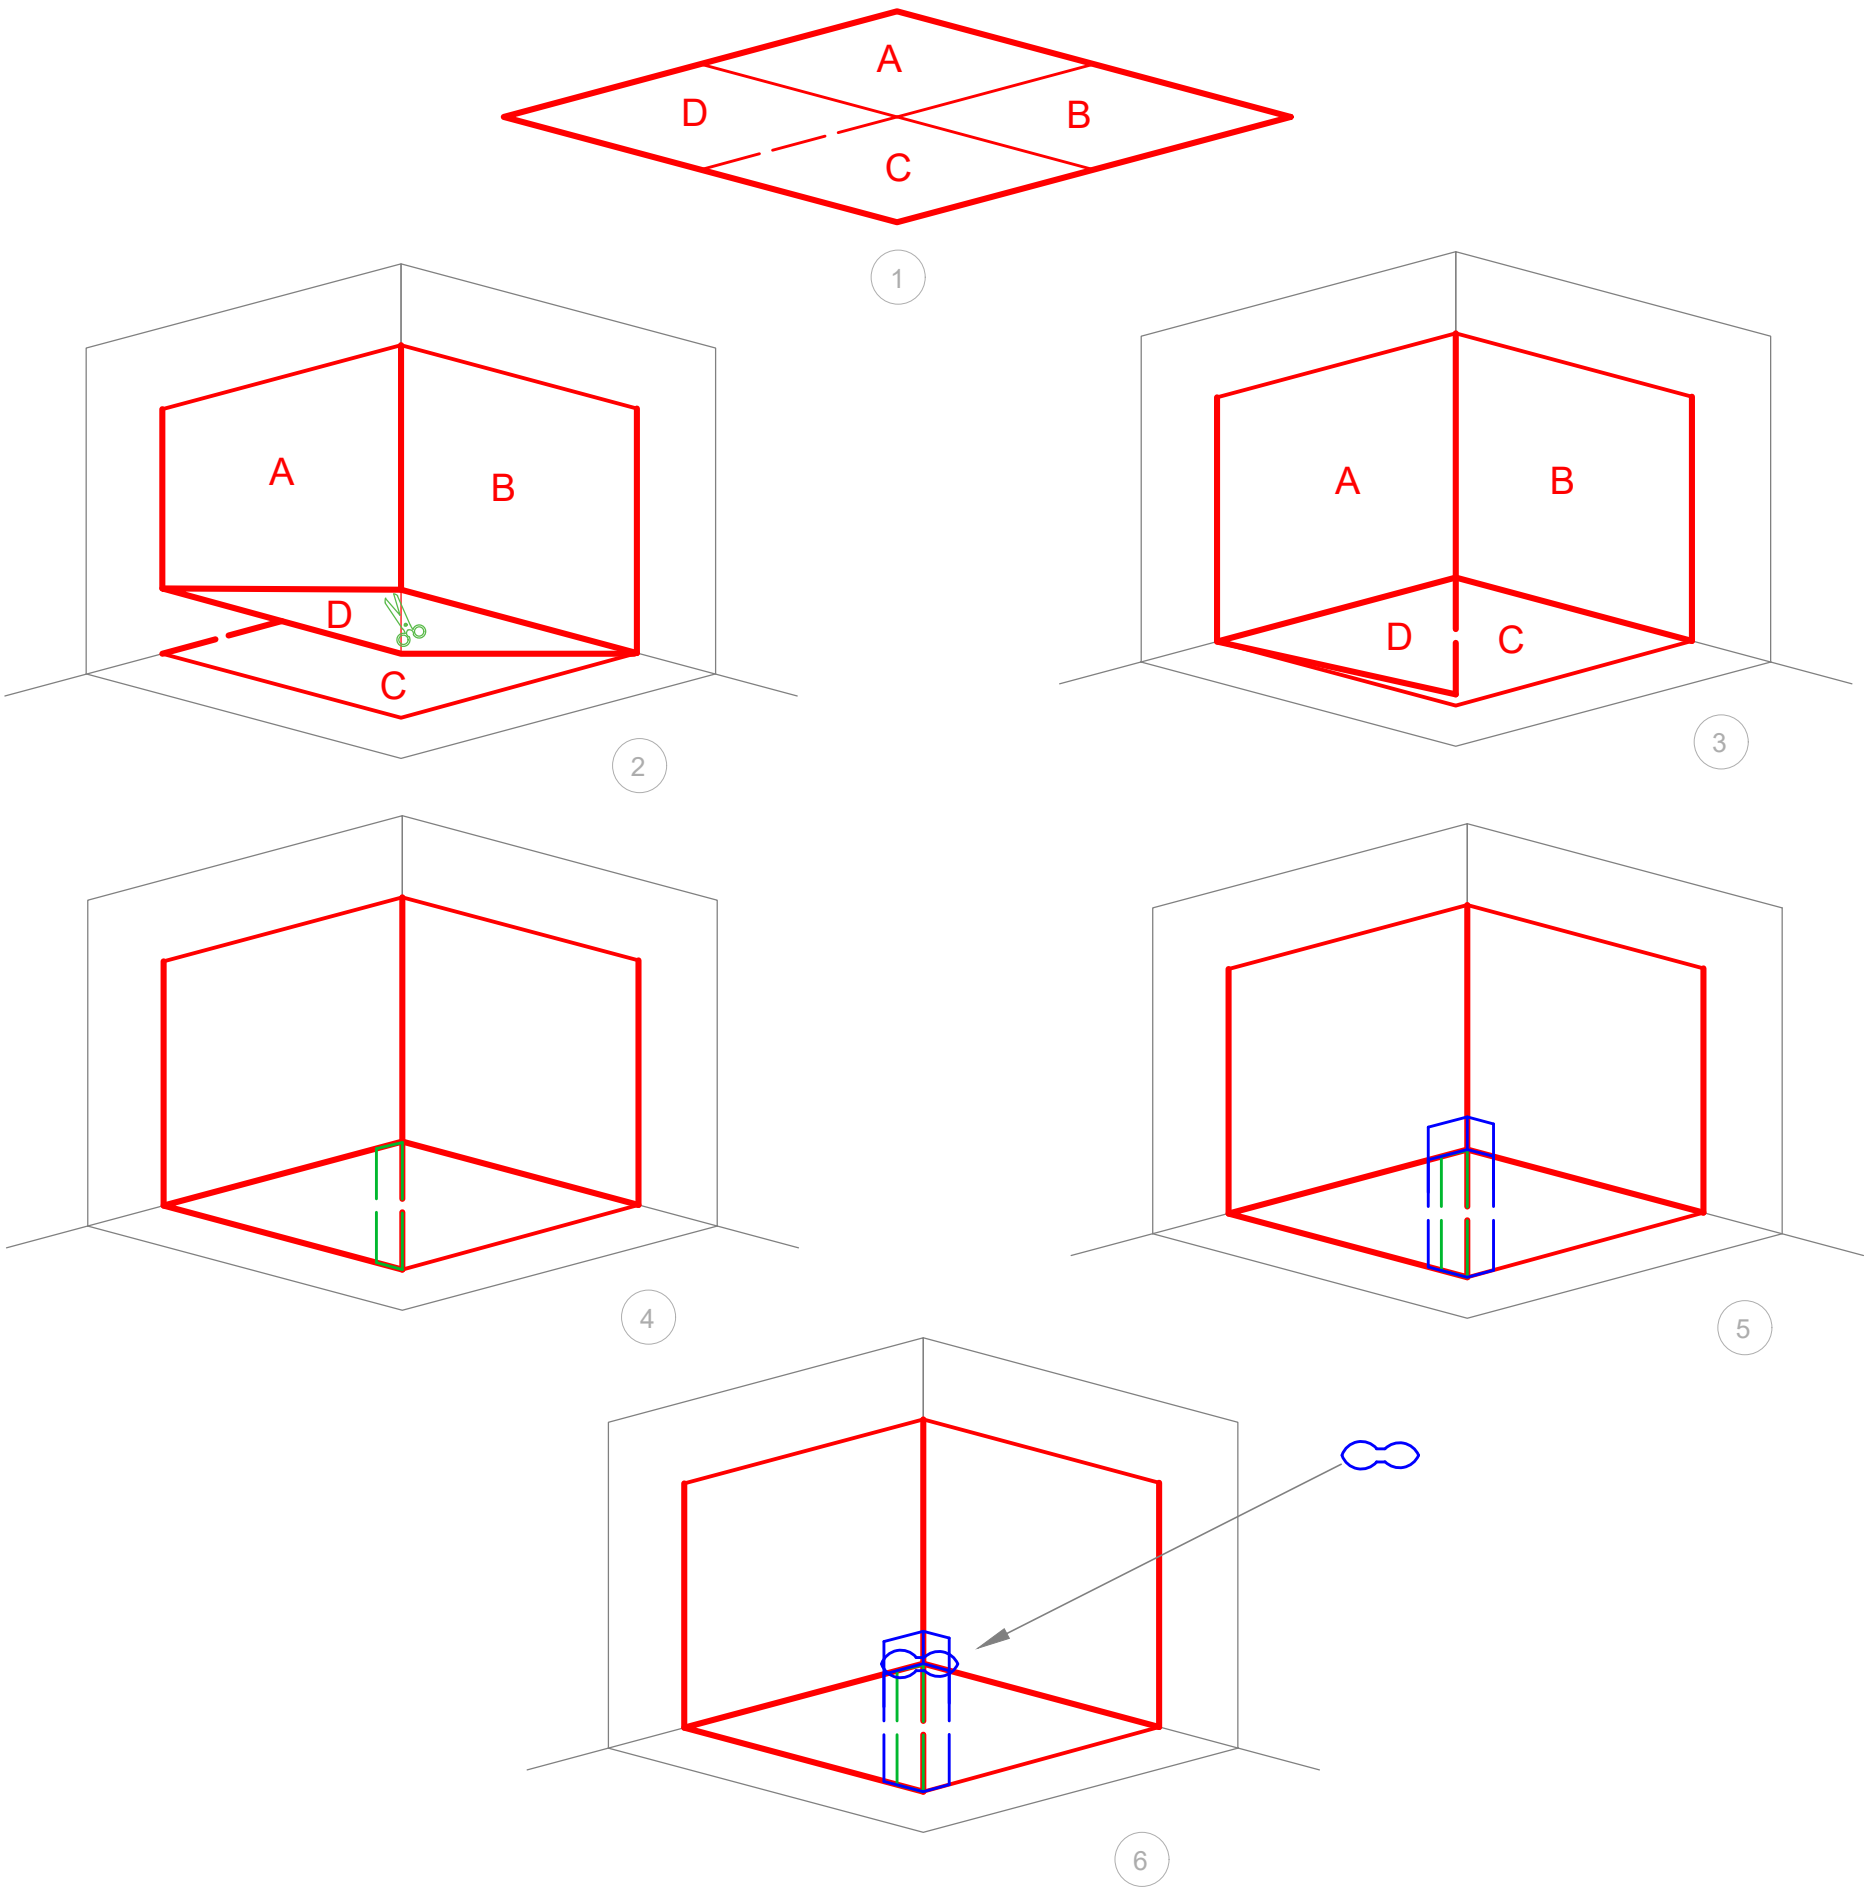

TITLE:
TREMproof FBM Plus: Detailing - Internal Corner

- NOTE:**
- Illustrative Purposes Only
 - Not to Scale

Drawn By:	SP
Checked By:	LG
Revision No.:	0
Date:	21/09/2026

POS	DESCRIPTION	INDEX
1	TREMproof FBM Plus DS Tape	
2	TREMproof FBM Plus Cover Tape	
3	TREMproof FBM Plus	

- STEP 1 – CUT MEMBRANE**
Cut the TREMproof FBM Plus along the line between Sections C and D, from the outside edge to the centre point of the corner.
- STEP 2 – POSITION AND FORM INTERNAL CORNER**
Position the membrane into the internal corner, with Section C laid flat to the horizontal substrate and Section D folded to form the corner overlap. Firmly form Sections A and B against the vertical upturns.
- STEP 3 – CUT SECTION D**
Make a diagonal cut to Section D as indicated, allowing the membrane to fold neatly into the internal corner without bunching or excessive build-up.
- STEP 4 – INSTALL DS TAPE**
Apply TREMproof FBM Plus DS Tape beneath the formed overlap at the corner and firmly roll the membrane together to achieve full contact and adhesion.
- STEP 5 – INSTALL COVER TAPE**
Apply TREMproof FBM Plus Cover Tape centrally over the formed corner joint, extending the Cover Tape a minimum 120 mm up the vertical upturns. Firmly roll the Cover Tape into place.
- STEP 6 – COMPLETE CORNER DETAIL**
Cut TREMproof FBM Plus Cover Tape to the indicated figure-eight shape and apply centrally over the internal corner intersection. Firmly roll into place to complete the detail.



Tremco CPG Australia Pty Ltd
12/4 Southridge Street, Eastern Creek, NSW 2766
www.tremco.com.au