




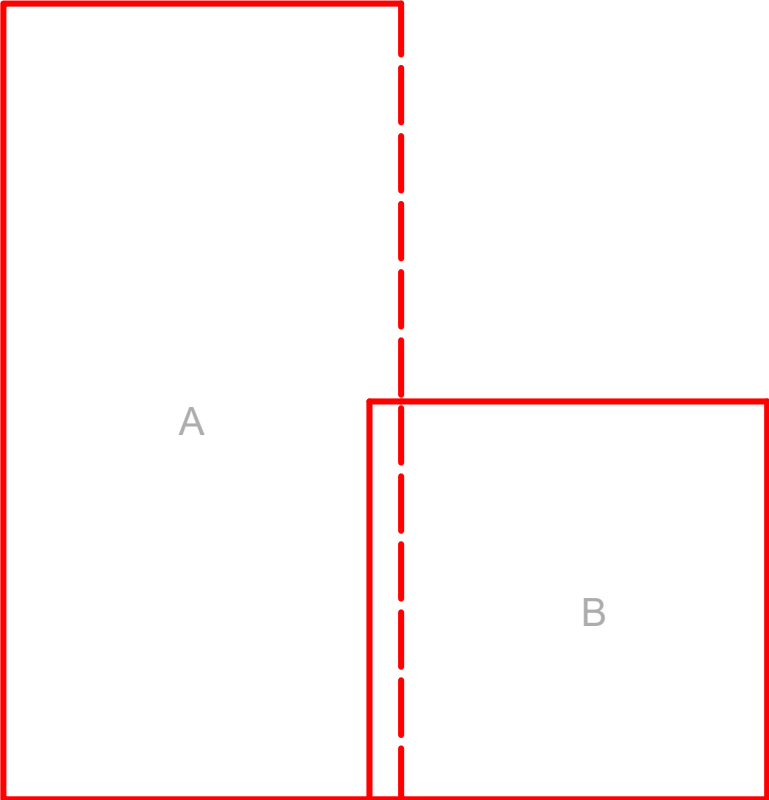


1

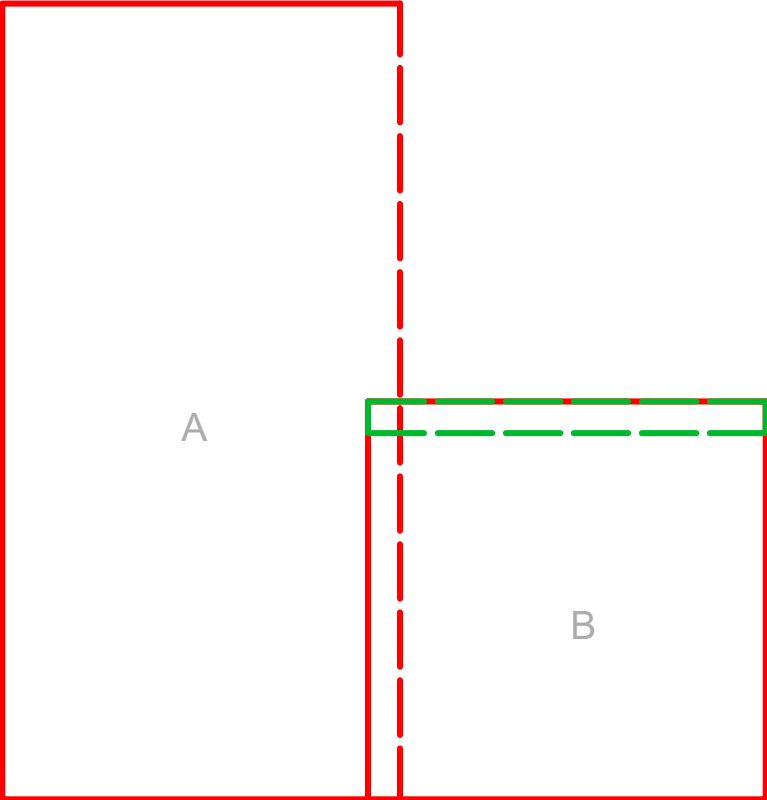

2

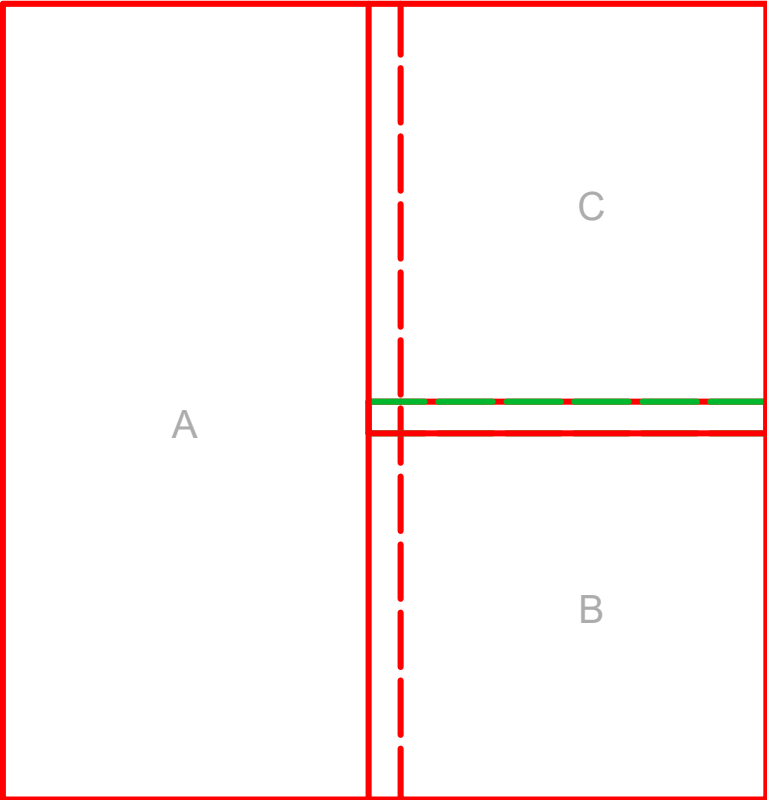

3

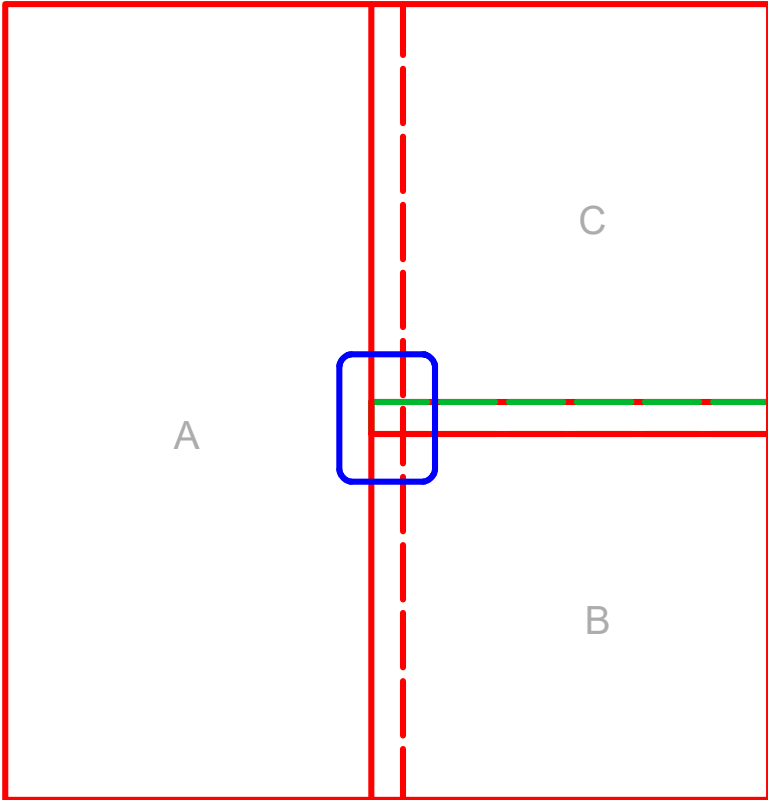

4

TITLE:
TREMproof FBM Plus: T- Junction

- NOTE:**
- Illustrative Purposes Only
 - Not to Scale

Drawn By:	SP
Checked By:	LG
Revision No.:	0
Date:	7/10/2026

POS	DESCRIPTION	INDEX
1	TREMproof FBM Plus DS Tape	
2	TREMproof FBM Plus	
3	TREMproof FBM Plus Cover Tape	

- Note:
1. Form standard 80 mm long-side lap between sheets A and B. Ensure lap area is clean, dry and free from contaminants, wrinkles or fishmouths.
 2. Install TREMproof FBM Plus Double-Sided Tape on the adjacent face of FBM plus cutout B as shown
 3. Install intersecting TREMproof FBM Plus sheet C over the Double-Sided Tape on sheet B and firmly roll into position. Form the adjoining standard 80 mm long-side lap between A and C as shown
 4. Complete T-junction with TREMproof FBM Plus Cover Tape patch. Cut patch with rounded corners and size sufficiently to fully cover and extend beyond the intersecting lap edges. Centre over the T-junction and firmly roll to achieve continuous adhesion with no wrinkles, voids or fishmouths.



This drawing provides general technical guidance based on Tremco CPG Australia’s knowledge and experience at the date of issue. Products must be selected and installed in accordance with current Tremco documentation, applicable Australian Standards, the NCC and project-specific requirements. Final design, detailing and suitability remain the responsibility of the relevant project professionals and contractor. Tremco reserves the right to update this information without notice. Supply is subject to Tremco’s applicable terms, conditions, warranties and exclusions.